7.5 PRINTER INSTALLATION

Technical Manual-FS502 Touch

*C*echosens

Technical Manual-FS502 Touch



- Insert the printer CD driver installation
- Turn on the printer and connect it to one of the USB ports on the FibroScan[®]



Warning: if the printer has been disconnected, make sure it is re-connected to the same USB port after turning on the FibroScan in order for it to be recognized by the operating system.

- Wait for some seconds. A window « Hardware Wizard window » is displayed; select« Not this time ». And click on "Next".
- If not then click on "add printer" and follow the instruction.
- The window « What do you want the Wizard to do? » is displayed; select « Install from a list or a specific location ». And click on "Next".
- A new window is displayed; on this window select « Search from removable media (floppy, CD-ROM) ». And click on "Next".
- Wait for some seconds. A window with a list of driver is displayed; select the appropriate driver and follow the instruction till the end.
- Click on "Printer Selection Tool" on the "User interface" tab.
 - If the printer can be used with the system, it will be displayed in the list

E300M002.3

ECHOSENS IS REGISTERED TRADEMARKS © COPYRIGHT ECHOSENS ALL RIGHTS RESERVED

45



8 MAINTENANCE

Standby

use is the default printer.

Click on "OK".

the monitor).

If there are several printers in the list, ensure that the one you wish to

If this is not the case, right-click on the printer you wish to use and select "Set as Default Printer".

Turn the FibroScan[®] off and on again (switch in the lower left-hand corner of

Warning: if the printer has been disconnected, make sure it is re-connected to the same USB port after turning the FibroScan[®] in order for it to be recognized by the operating system.

When running the first print job, a "Print error" message may be displayed. Click on "OK" to restart the print job.

8.1 SPARE PARTS LIST

-

Zone	Reference	Designation
Probe	AP107_100	M Probe
	AP107_200	S Probe
	AP107_300	XL Probe
	AP107_007	Probe S, M, XL Case Foam
	AP107_008	Probe S, M, XL Case
Computer zone		
	E300_001	FS502T Mother board Set
	E300_002	FS502T Sata Hard disk drive prepared
	E300_003	FS502T Sata DVD-ROM Drive
	E300_004	FS502T Display set with Touchpad
	E300_005	FS502T Screen Inverter board
	E300_006	FS502T Toucpad Inverter board
	E300_007	FS502T On/off button
	E300_008	FS502T Sata power cable
	E300_009	FS502T Sata HDD cable
	E300_010	FS502T Sata DVD cable
	E300_011	FS502T Toucpad Inverter board cable
	E300_012	FS502T LVDS cable
	E300_013	FS502T Mother board power cable
-	E300_014	FS502T Screen Inverter board CABLE
	E300_015	FS502T DVI CABLE

Elastography engine zone	AP40012	FS502T Elastography engine V2
Power supply zone	E300_016	FS502T Power supply
	E300_017	FS502T Main filter
	E300_019	FS502T Remote control board
	487 088	FS502T with brake
	487 088	FS502T without brake

E300M002.3

ECHOSENS IS REGISTERED TRADEMARKS © COPYRIGHT ECHOSENS ALL RIGHTS RESERVED

46