

Bump Detector

If the system has detected a bump, NDI recommends performing an accuracy assessment. ToolBox will continue to display the bump detected status alert until you clear the alert.

To Clear the Bump Detected Status Alert

1. In the [configure utility](#) left tree view, expand the  **Position Sensor** node.
2. Expand the  **Settings and Options** item.
3. Select **Bump Detector**.
4. Set the value of the **Clear** parameter to **Clear**.

Return to...

> [Changing and Viewing Settings](#)

Related Topics:

[Saving and Loading Parameter Values](#)

[Changing and Viewing Settings](#)

[Configure Utility](#)