## **Marker Information**

Marker information for each tool is diplayed in the bottom right section of the tool tracking utility.

• 8700338	• 87	'0033:	9	870	)034	10											
- Transformati	ion——																
Тю								Q	0:								
Ty:								Q	ю								
Tz:								Q	y:								
Error:								Q	Z:								
Too Few N	larker	s										(	Sy:	ste	m	Ale	ert)
Marker Infor	mation																-
	A B	СD	ΕF	G	Н	I	J	Κ	L	М	Ν	0	Ρ	Q	R	S	Т
Used in 6D	0	00	00	>0	0	0	0	0	0	0	0	0	0	0	0	0	0
Not Used:	00	00	00	00	0	0	0	0	0	0	0	0	0	0	0	0	0
_Tracking Inf	ormatic	in															

ToolBox displays the following marker information:

Used in 6D	These markers were used to calculate the tool transformation. Green indicator: The marker was inside the characterized measurement volume. Yellow indicator: The marker was outside the characterized measurement volume.
Not Used	<ul> <li>These markers were not used to calculate the tool transformation.</li> <li>Yellow indicator: The marker was outside the characterized measurement volume.</li> <li>Blue indicator: The marker exceeded the maximum marker angle defined in the tool definition file.</li> <li>Red indicator: The marker exceeded the maximum 3D error defined in the tool definition file.</li> </ul>

## Return to...

- > Tool Panel Display
- > Tracking Tools

## **Related Topics:**

<u>Tracking Tools</u> <u>Position and Orientation</u> <u>Transformation Errors and Warnings</u> <u>Frame Number and Face</u> <u>Tool Tracking Utility</u>