

FIRMWARE UPGRADE PROCEDURE


- Run the software HIDBootLoader.exe on the Personal Computer
HIDBootLoader interface appears in this form:



- Connect the USB cable in the laptop and the microcontroller board
- Turn On the laser
- HIDBootLoader interface appears in this form:



- Press the button Open Hex File and select the file FBF0000xxxxxxx.hex (the name depend of the version)

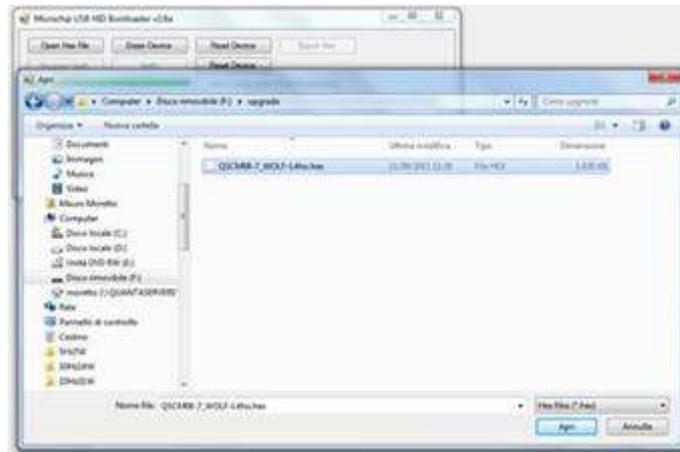

- HIDBootLoader interface appears in this form



- Press the button Program Verify and wait until the HIDBootLoader interface appears in this form:



- Disconnect the USB cable
- Turn Off the laser
- Turn On the laser